Assembly, disassembly and use instructions



h

Use: The Tandem pliants (folding) are platforms used by professionals to work safely in heights.

 
Maximum load on the floor: 150kg. Maximum load in the tool bag: 15kg. Maximum horizontal pressure at floor level: 30kg.

Specifications: The Tandem pliants are compliant with the "Plateformes Individuelles Roulantes Légères" (Lightweight Rolling Individual Platform) (PIRL - NF P 93-353) and with the decree dating from December 1st 2004 (n° 2004-924). Two wheels are designed to move the LRIP and they cannot be moved. Two autolock independent and telescopic stabilizers guarantee the stability of the LRIP when used according to the norm.

Opening the LRIP:





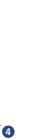

Press the button 1, legs 3 Open the LRIP until next to wheels 2, rotate the floor is supported by them outwards 3 retract them 4.



then the span.




Retracted position*:



PLIANI	_		
	18404	18405	18406
Weight	18,3 kg	19,1 kg	20,1 kg
Floor Height Fh	0,52m	0,74m	0,84m
	0,63m	0,84m	0,95m
	0,74m	0,95m	1,05m
	0,84m	1,05m	1,15m
Length overall Loa	1,03m	1,21m	1,29m
	1,12m	1,29m	1,38m
	1,21m	1,38m	1,47m
	1,29m	1,47m	1,54m
Width overall woa	0,98m	0,94m	1,15m
	1,21m	1,18m	1,42m
	1,26m	1,24m	1,53m
	1,24m	1,22m	1,56m
Folded length*	1,24m	1,47m	1,58m

Folded width' Folded thickness*

0,36m

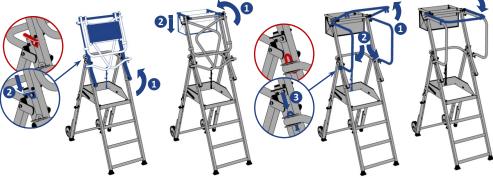

4 Rotate the upper part 1 5 Rotate the shelf 6 Rise the handrail 1, then 7 Lower the handand check the locks are set 2.

tool bag 2.

1, then unfold the open the safety rails 2 and rail so it touches lock them 3.

the safety rails.

Moving the LRIP:

While folded, grab the LRIP by the low handrail of the safety rail.

In working position, grab the LRIP, with no hardware on it, by the legs on the access side, with the stabilizers retracted or not, depending on the environment.





Setting the height:



and check the floor is they reach the ground 2. horizontal.

Access:



inside of the LRIP 2.

8 Press the button, deploy 9 Lift the pad 1 and 10 Lift the handrail 11 Lower the handrail the legs at the desired height deploy the stabilizers until up 1, and access the 1 and install the safety **LRIP stability:**





Always deploy the stabilizers. When the LRIP is set against a wall, you only need one stabilizer.

Closing the LRIP:

Follow the reverse order of the opening, step 2 being optional.

Maintenance and servicing:

Before each use, check the general condition of the LRIP. Points to check:

- The state of welded and bolted structures, of the plywood and the geometry of the elements.
- The mobile elements and locks work properly.
- Stickers can be easily read.

Replace defective parts with Duarib-made components.

It is mandatory to periodically check the hardware according to the current legislation.

Safety measures:

Set all the safety rails.

All 4 legs must touch the ground.

Adjust the legs so the floor is horizontal.

Deploy the stabilizers.

Always access and leave while facing the LRIP.

Wearing PPE is mandatory.

Do not go up the safety rail.

Do not jump on the floor.

