


**Compliant with PIRL norm XT5 (Individual Light Mobile Platforms), PIR norm XT7/XT9 (Individual Mobile Platforms )**

**1. PRODUCT DESCRIPTION:**

These mobile ladders with platform are used for all kinds of works by a single operator working on the shelf. It is fitted with two wheels to allow it to be moved; these wheels are not adjustable. Two independent supports can be adjusted to within a millimetre, the device locks automatically and the product remains stable when used in normal conditions as recommended in the norm.

Load capacity: 150 kg  
Shelf dimensions: 0.40 m x 0.50 m

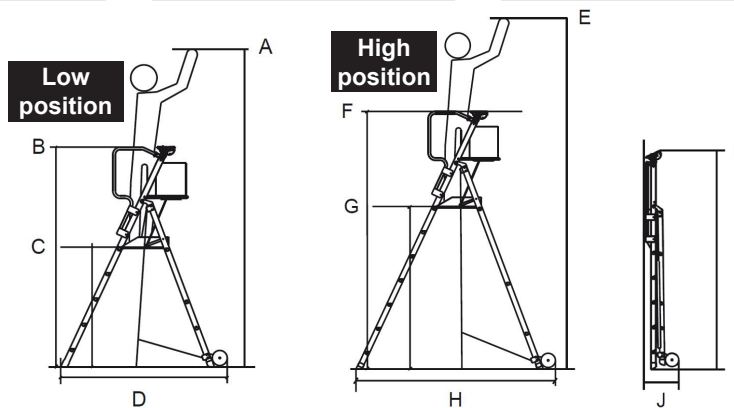

		LOW POSITION				HIGH POSITION					
	Item code	Max working height A	Overall height B	Shelf height C	Overall width D	Max working height E	Overall height F	Shelf height G	Overall width H	Folded height I	Folded width J
3 to 5 steps	18.235	2,804 m	1,838 m	0,804 m	1,432 m	3,315 m	2,348 m	1,315 m	1,865 m	2,06 m	0,42 m
4 to 7 steps	18.247	3,058 m	2,091 m	1,058 m	1,649 m	3,820 m	2,852 m	1,820 m	2,299 m	2,34 m	0,42 m
6 to 9 steps	18.269	3,566 m	2,569 m	1,566 m	2,073 m	4,328 m	3,333 m	2,328 m	2,723 m	2,91 m	0,42 m

**2. USE:**

**WHEEL ASSEMBLY:** see plan opposite.

**TO OPEN:**

- 1- To open the platform, stand in front of or to the side and tilt the shelf downwards. Take care not to place your fingers underneath the shelf.
- 2- Open the stabilizers and pull them out until they touch the floor.
- 3-4 - Put the handrails in place and turn the hinge lock 90° to lock each rail.

**ACCESS:**

Once on the shelf, close the folding handrail (if the product is fitted with one).

**ADJUSTMENT OF THE STABILIZERS:**

To open out the stabilizer, pull its mobile part.

To fold the support, push the pad upwards.



**ADJUSTMENT OF THE HEIGHT:**

- 5 - Maintain device's weight by the safety rail, feet supporting on the step.
- 6 - The device's weight maintained, tilt the safety switch with the thumb and pull on the control handle.
- 7 - Release the control handle as soon as the uprights start to move.
- 8 - Repeat the procedure with the support section.

For use on an uneven section, adjust the front and support to each specific level.

**TO CLOSE:**

Unlock and fold down the lateral safety rails. Fold the product by pushing the shelf upwards.

**MOVING WHILE IN WORKING SETUP:**

The platform must be moved when the operator has left it. Gently raise the uprights on the access side to bring the rear wheels into contact with the floor. Retract the supports if the working environment requires it.

**TRANSPORT:**

Once the product is folded, raise the platform by the handles located at the ends of the safety rails. The platform is now positioned like a wheelbarrow and is in rolling mode.

**3. TIPS FOR SAFE USE:**

- Check that the platform is in good working order before each use.
- Do not use the platform behind a non-sealed door without locking the safety rails.
- The surfaces supporting the platform must be on a level and non-slip.
- It is essential that the platform rests on the floor on its feet.
- Do not climb onto the platform if you suffer from vertigo or if you are momentarily overcome by fatigue, heat etc.
- Wear shoes offering firm support when operating on the platform.
- Always climb up and down facing the platform.
- Ensure that the work area is free of all bare live electrical conductors.
- The platform must always be handled with care.
- Climbing on the safety rails or one of the trays is strictly forbidden.
- It is strictly forbidden to have two operators on the same platform.

**MAINTENANCE:**

Check regularly the components' state and replace them if necessary with original parts.

